INSTALLATION


Nautley highly recommends having a knowledgeable person in marine service repair to install the lifting arms.

Step 1 - Determine where to locate the lifting arms on the swim platform. Offset DinghyRamp[™] port or starboard depending on the dinghy's weight distribution. Stern arm should be an estimated 8 inches from dinghy's transom. Consider these factors:

Consider these factors:

- a) Where will the dinghy rest with the motor in the up position?
- b) How is weight distributed with fuel and accessories?
- c) Will DinghyRamp[™] interfere with a transom door or ladder?
- d) Are mounting holes clear of swim platform support brackets?

The standard DinghyRamp[™] HD requires a minimum unobstructed depth of half your dinghy's width, and an approximate 32 - 41 inch centerline spread between lifting arms.

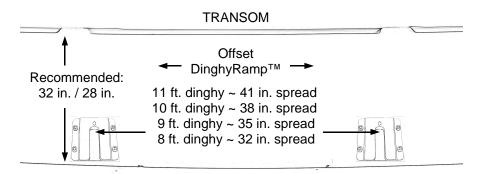

- **Step 2** Place mounting brackets (#QUICKKIT) on the edge of the swim platform. Adjust mounts so they are parallel and facing aft.
- Step 3 Using the mounting brackets as a template, drill holes.
- **Step 4** Remove mounts from swim platform and generously caulk bottom of mounting brackets. Recommend 3M 5200.
- Step 5 Bolt mounting brackets using the (8) screws provided in kit.

INSTALLATION (Integrated Platform)

- Step 1 2 see page 1
- Step 3 Pre-drill one 7/32 hole into the swim platform for one mounting bracket.
- Type I SOLID WOOD CORE: Fasten mounting bracket with tapping wood screws, not included. Requires: 7/32 drill bit (8) #14 X 1-1/2" stainless pan self-tapping screws
- Type II HOLLOW CORE: Fasten mounting bracket with pan screws provided and use toggler anchors, not provided. Follow instructions on packaging for toggler anchor installation.
 - Requires: 1/2 inch drill bit (8) 1/4-20 stainless toggler anchors Can be purchased at your local marine center.
- **Step 4** Using the mounting brackets as a template, drill the (7) remaining holes.
- Step 5 Generously caulk the bottoms of mounting brackets and fasteners with 3M 5200 adhesive / sealant.
- Step 6 Bolt mounting brackets based on type I or II.